Analog Series 4000 Short Case Temperature Controllers




The Athena 4000 is a 1/4 DIN panel mounted, short metal case enclosed controller that can be used for accurate proportional temperature control of most processes. The controller accepts thermocouple or RTD input, and offers a choice of standard single outputs for energizing most common output devices. A single, digital filtered LED display provides visual indication of various controller functions.

- ▲ Noise-Immune Analog Circuitry
- ▲ 25-turn Setpoint Pots-Optional Second (Alarm) Setpoint
- ▲ Adjustable Bandwidth and Manual Reset to Eliminate Offset Error
- ▲ 3-Mode PID Available
- ▲ Available as FM-Approved Limit Controller





Ordering Information

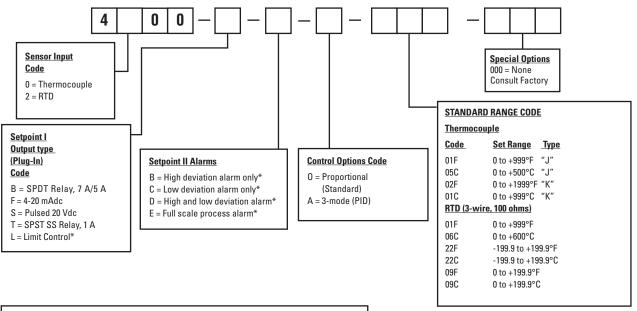

Example

Model 4000-B-E-05C = a controller with a thermocouple sensor input; and SPDT relay output (non plug-in) for setpoint I; a full scale process alarm for setpoint II; and a thermocouple J input range of 0 to 500° C.

*Not available on 4200

Athena's ZC/PC solid state contactors, Series 19 and 39 SCR power controllers, can be added to boost ac load switching capacity.



Analog Series 4000 Short Case Temperature Controllers

Technical Specifications

Line Voltage 120/240 V $\pm 10\%$, 50/60 Hz $\pm 15\%$

Power Consumption Less than 5 VA

Common

Mode Rejection* Maximum error ±1°C with 240 V, 60 Hz

applied as a common mode signal between sensor input and chassis ground

Series

Mode Rejection* Maximum error $\pm 1^{\circ}$ C with series mode

signal of 100 mV pk-to-pk at 60 Hz

Sensor

Break Protection Up scale standard, zero output for open

sensor

Thermocouple Maximum lead resistance 100Ω for rated

accuracy, cold junction compensation

standard

RTD 100 ohms (0°C) Platinum, DIN coefficient

standard

Setpoints Momentary switch displays Set I or Set II

(optional), 25-turn pot provides 1 or 0.1

settability, range dependent; Set I-Adjustable over full span;

Set II-process alarm (-E) adjustable over full span. Deviation alarm (-B,-C,-D),

consult factory

Setpoint

Repeatability $\pm 0.1\%$ to $\pm 0.2\%$ of span

Setpoint Resolution 1 or 0.1 (Range dependent)
Calibration

Accuracy a. T/C input ±0.4% of span over 10%

to 90% of range b. RTD inputs ±0.1% of span for 1°F

or 1°C ranges; $\pm 0.2\%$ of span for

0.1°F or 0.1°C ranges

Ambient Stability a. T/C input 3 V/°F ambient to input

b. RTD input 0.1% for 80°F to 130°F

(27° to 55°C)

Process Indication Filtered LED, 3 or 3-1/2 digits, 2 readings

per second update; readability is 1°F, 1°C, 0.1°F or 0.1°C, range dependent

Dimensions Front Panel - 3.780 sq. in. (96 mm²)

Case - 4.646" (118 mm)

Depth Behind Panel - 3.780" (92 mm) Panel Cut-out - 3.622 sq. in. (92 mm²)

*Note: Applies to all units with exception of "F" output controllers when used with other than Athena SCRs or stagers.

Output Type	Setpoint 1 (Plug-in)					Setpoint 2		
	В	F	s	T	L	B,C,D	E	
	SPDT relay resistive load rating 7 A/120 V 5 A/240 V 50 VA inductive	4-20 mAdc into 1000 ohms maxmum; not isolated from thermocouple	Pulsed dc for driving SS contactors 0-20 V, open ckt 0-20 mA, short ckt not isolated from thermocouple	SPST SS relay, zero voltage switched 1 A 120/240 Vac, 10 A inrush, 2-4 mA leakage	Limit Controller	SPDT relay 3 A @ 120 Vac resistive (4000 only)	SPDT relay 3 A @ 120 Vac resistive	
Proportional Band	Adjustable for .2-5% of span				Not applicable	On/Off (see differential)	On/Off (see differential)	
Output cycle time (Switch selectable)	On-off 5-10-15 sec	Continuous Proportioning	0.5-1.0-1.5 sec	0.5-1.0-1.5 5-10-15 sec	Not applicable	Not applicable	Not applicable	
Manual reset (Offset)	Standard-adjustable for full proportional bandwidth (eliminated if PID is ordered)				Not applicable	Not applicable	Not applicable	
Optional 3-mode (PID) action	Past = 0.1 sec rate, 48 sec reset; medum = 18 sec rate, 90 sec reset; Slow = 65 sec rate, 300 sec reset				Not applicable	Not applicable	Not applicable	
Differential	0-5° adjustable				Not applicable	±°F or ±°C	1% maximum of unit span	
Indication	Red LED "ON" when output signal is present or relay is energized							
Operating Ambient	30°F to 131°F (0°C to 55°C)							

