

The FDC-L41 1/4 DIN Limit Control provides up to three discreet setpoints, two control outputs, communication options, fast scan rates and user friendly prompts making it the right choice for safety protection.

The L41 offers Remote Reset as standard and offers a full range of universal high resolution (18 bit) inputs; T/C, RTD and linear mA/VDC inputs. Power requirement of either 90-250 VAC or optional 11-26 VAC/VDC allows the L41 to be used virtually anywhere.

Control outputs offer Form C Relay, SSR Drive or Triac with the optional Output #2 configurable as latching, nonlatching or with alarm silence logic. Output #2 may also be specified as a transmitter power supply.

Communication options offer a variety of analog retransmission or serial RS232/485 Modbus RTU.

- Dual Display
- Latching outputs
- Remote Reset
- Shallow Panel Depth
- Communications
- Agency Approvals



FDC-L41 LIMIT CONTROL

http://www.futuredesigncontrols.com/L41.html

FDC-L41 Specifications

Power

90-250 VAC, 47-63Hz, 10VA, 5W Maximum 11-26 VAC/VDC, 10VA, 5W Maximum

Input

Thermocouple: Type J, K, T, E, B, R, S, N, L, C & P *RTD:* PT 100 ohm DIN and PT 100 JIS *Linear:* 4-20mA, 0-20mA, 0-60mV, 0-1, 0-5, & 0-10VDC *Range:* Per Table in manual

Accuracy: Typically better than +/- 0.25%; see table in manual

Sensor Break: 4 seconds for T/C & RTD inputs; 0.1 second for linear mA & VDC inputs

Common Mode Rejection: 120dB

Sample Rate: 5 times per second

Remote Reset: Standard

LIMIT OUTPUT TYPES

Relay: Form C 2.0 Amp/240VAC *SSR Drive:* 5 VDC@30mA, 14 VDC@40mA *Triac:* 1.0 Amp/240VAC

INDICATION

Dual LED 4 Digit Displays: Process 0.56" and Setpoint 0.4"

Display Logic:

- Upper Display: Process (temperature) is always shown
- Lower Display: Configurable; non-Alarm condition display SAFE or Setpoint value; when in alarm Setpoint is shown.

Status Indicator: Output #1, Output #2, °F, °C, Lock

Options

Second Output: Relay Form C 2.0 Amp @240VC SSR Drive 5VDC @30mA, 14VDC @40mA Triac 1.0 Amp @240VAC

Second Output Alarm Types: Latching, non-latching and alarm silence

Second Output as DC Isolated Power Supply: 20VDC @25mA, 12VDC @40mA, 5VDC @80mA

Communication:

Serial Modbus RTU RS-232 or RS-485 Retransmit 0-20/4-20mA, 0-5/1-5/0-10VDC (15 bit) Configurable for PV, HSP1 or HSP2

ENVIRONMENTAL AND PHYSICAL

Operating Temperature: -10 to 50C

Storage Temperature: -40 to 60C

Humidity: 0-90% RH (non-condensing)

Insulation: 20M ohms Minimum (500VDC)

Dielectric Strength: 2000 VAC, 50/60 Hz, @ 1 minute

Vibration Resistance: 10-55 Hz, 10 m/s for 2 hours

Shock Resistance: 200m/s (20g)

Molding: Flame retardant polycarbonate


IP Panel Rating: IP50 (IP65 optional)

Dimension\Weight: 3.77" (H) x 3.77" (W) x 2.08" (D) \ 8.84 oz (250g) 96mm (H) x 96mm (W) x 53mm (D)

P.O. Box 1196
Bridgeview, IL 60455 888.751.5444
888.307.8014 Fax Technical Support: 866.342.5332 www.futuredesigncontrols.com

ORDERING INFORMATION

Enter a number in each box which corresponds to the specifications you want when ordering the FDC-L41.

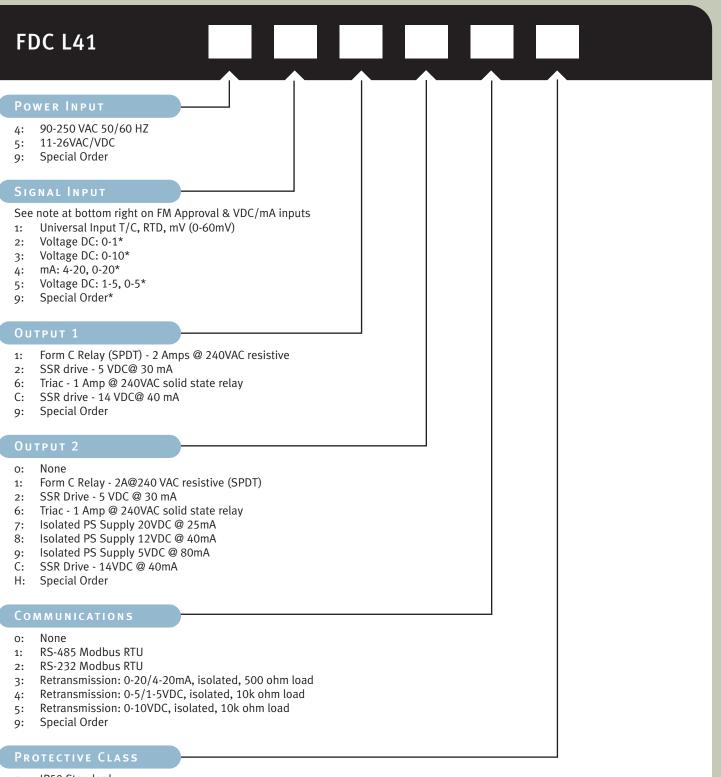

- o: IP50 Standard
- 1: IP65 (Nema 4X)